
» KTC5520/EATX Quick Reference Sheet «

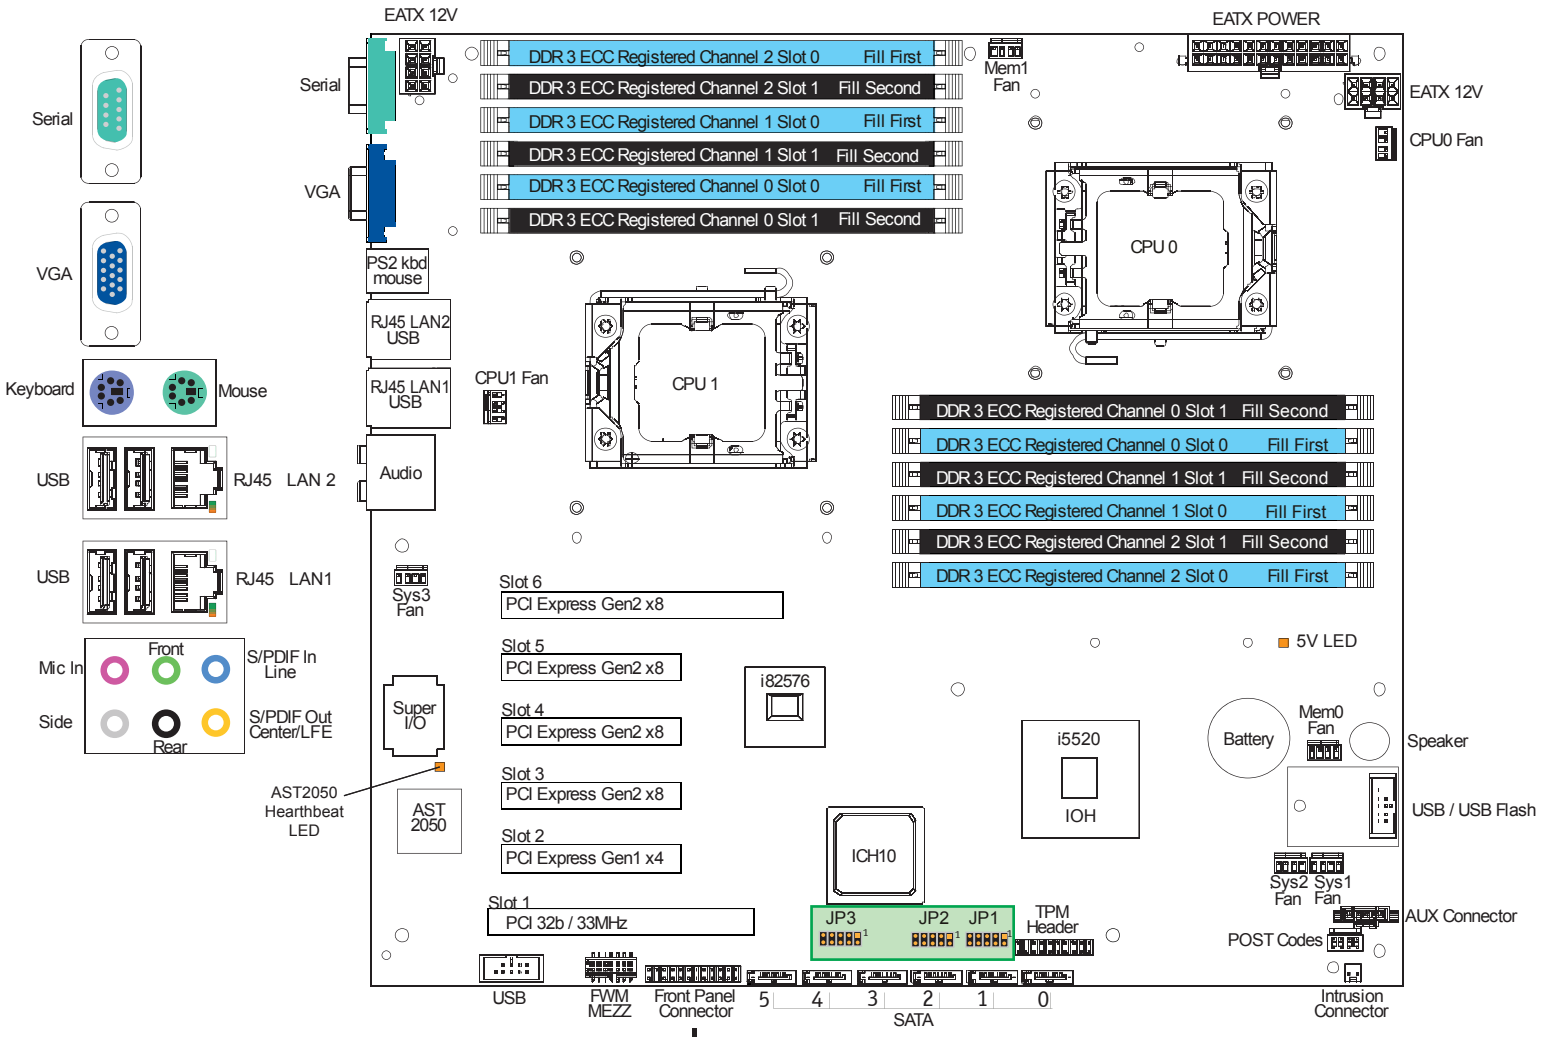

JUMPER SETTINGS

(Default Setting) 1

JP3 (7-8) Onboard Video	
Disabled (No KVM function)	in
Normal Operation	out
JP2 (1-2) BMC Disabled	
Disable BMC Operation	in
Normal Operation	out
JP2 (9-10) Clear CMOS in Flash	
Clear CMOS in Flash	in
Normal Operation	out
JP1 (7-8) Firmware Write Protect	
Protected	in
Not Protected	out



Software Startup

Obtaining / Configuring the IP address:

- Enter in the BIOS Setup Menu.
- Go to LAN Configuration Menu. This menu is located under «System Management»
- Set LAN channel IP Address source, IP Address, MAC Address, Subnet Mask and if required the Gateway Address on the corresponding menu.

Accessing Kontron Web Management Interface

- Type the IPaddress of your board in the address bar of an Internet browser.
- User Name: admin
- Password: admin

LEDs Significations


5V LED (Amber)

On : 5V power is present onboard
Off : 5V power is not present

AST2050 Hearthbeat LED (Amber)

Blink : Management Controller is working
Off : Management Controller is not working

RJ45 Connectors LED

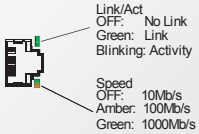

Software Update

Kontron recommands updating all onboard softwares for proper operation. Failing this operation might result in board misoperation.

Visit www.kontron.com for all packages.