Technical Order
Doc.-No.: 9450TO03
Rev.: V1
GF☐ EW☐ PD☐ EK☐ VT☐

Concerns :
Devices: P/N. 2223X ePanel-C3- V1.01
Concerning to :
Kontron HH and manufacturer

Description :
Heatsink assembly on ePanel-C3

Documentation :

Used Material Pn:94501 (ePanel-C3 cooler-set screws and washer including)




edited :	L.Trotter		12.11.2004
	Name	Unterschrift	Datum
approved :	T. Finstel		12.11.2004
	Name	Unterschrift	Datum


Step 1 pull the nylon washer over the M3x10mm hex screws




Step 2 remove the blue protection foils details a and b, beware don`t touch surface

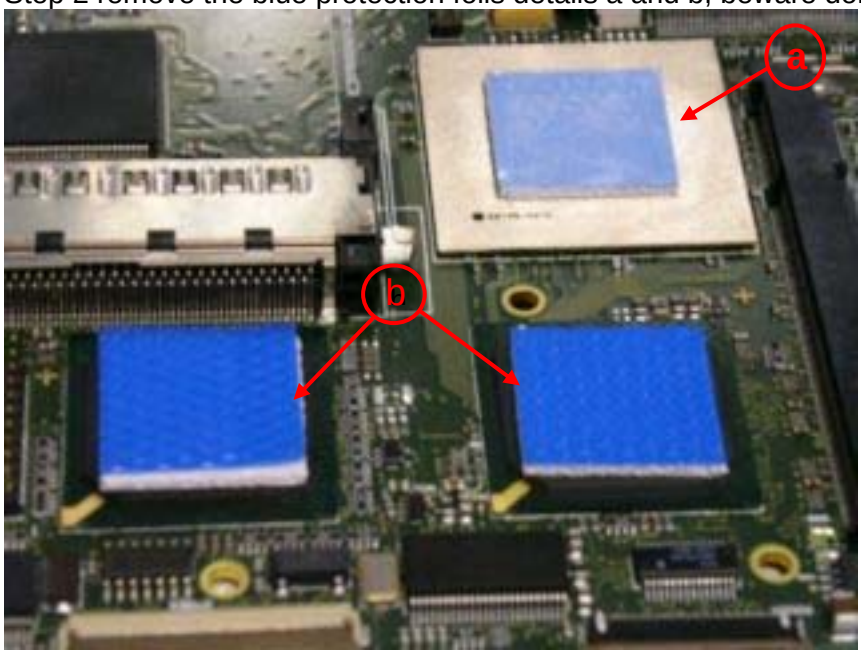


Step 3 take the heatsink with correct side (standoffs on bottom side) and light pressure on contact area. The standoffs must match the mountingholes on the ePanel pcb.

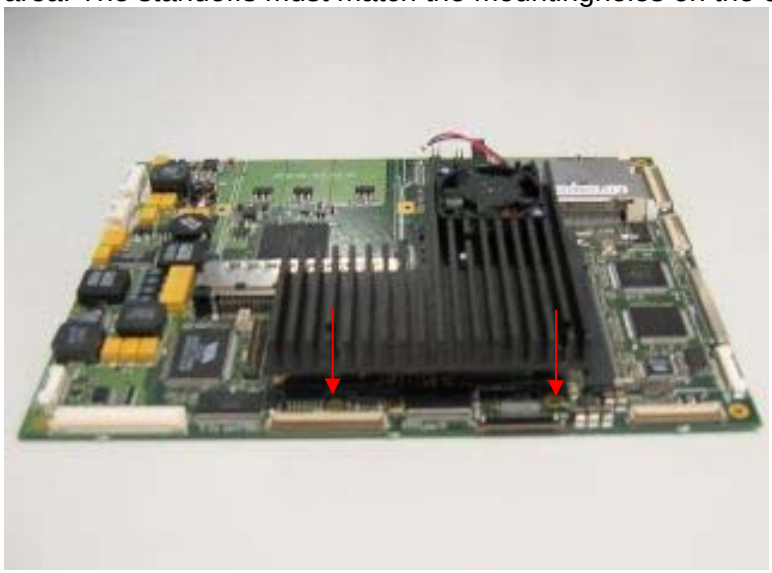

Step 4 Turn the Modul around check the right heatsink position, insert the three screws on the bottom side.
Use an 2mm Hexkey and turn clockwise the screws into the heatsink standoffs. Please note recommended torque.

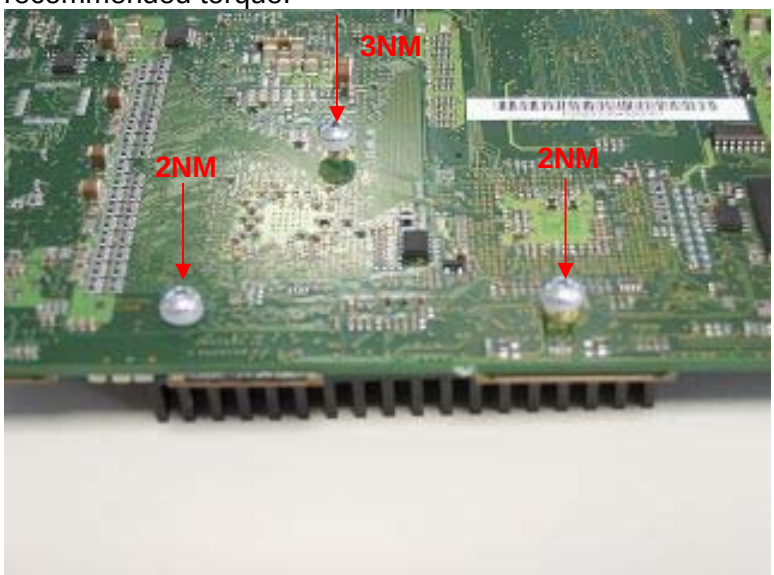

Step 5 Complete the assembling, plug the polarized Header into X1200.

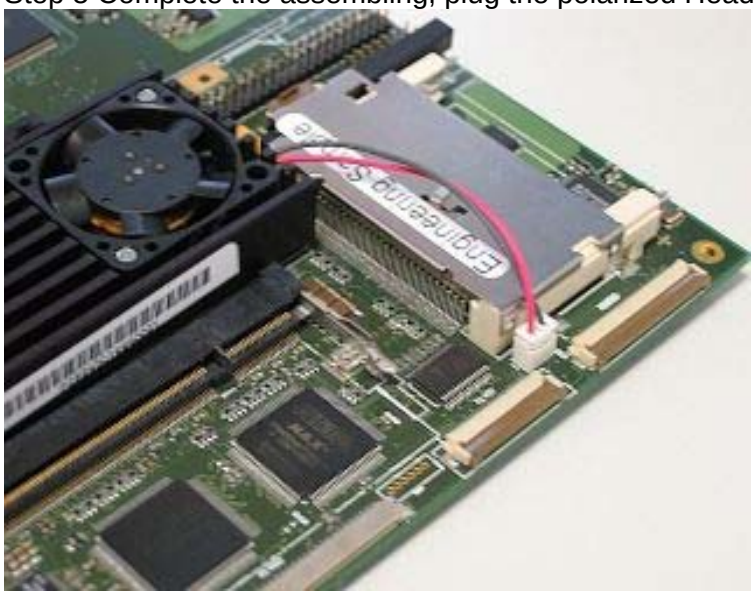

Step 6 Finish – verify your assembling !!

